



Tools required: Rubber mallet, electric drill and metric spanners

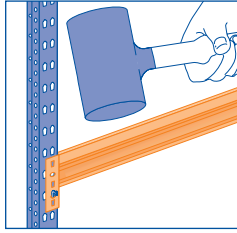

We advise the use of protective gloves and goggles, or eyeglasses when assembling this product.

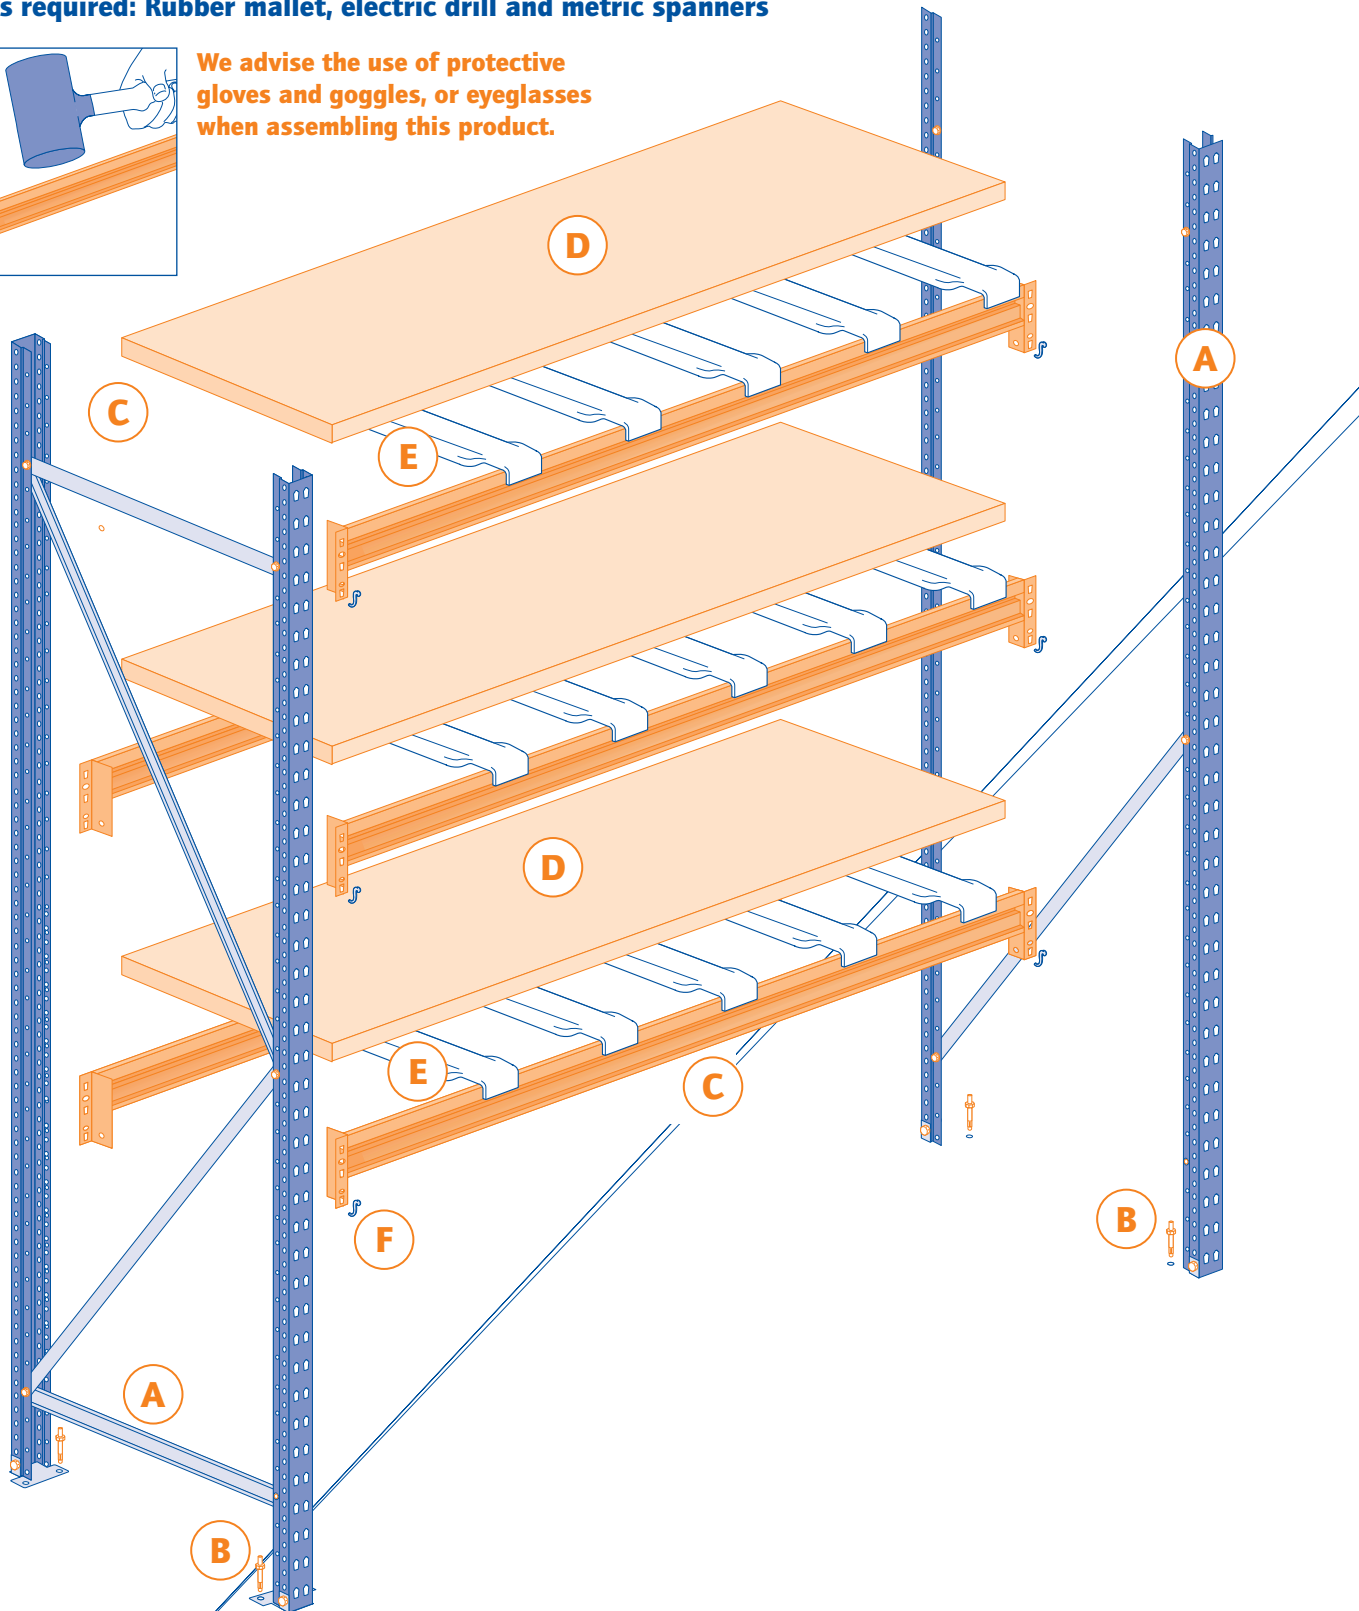

ASSEMBLY

- 1 Join the upright Frames **A** using front and rear beams **C** at the desired heights.
- 2 Insert the beam safety pin **F**.
- 3 Add chipboard supports **E** if the Heavy Duty levels have been ordered.
For quantities per level see over.
- 4 Fit shelves **D** between front and rear beams **C**.
- 5 Secure the unit to the floor with fixings **B**, if required.

NB: This shelving system is not designed to be loaded by mechanical means, e.g. fork lift truck. Always load and unload by hand.

COMPONENTS

Upright frames
2 off

